

MODEL	SYSTEM	SUB SYSTEM	SUB SYSTEM	测试功能	
01. PRIDE	01. PRIDE 2003	01. ENGINE CONTROL	01. 1. 3L SOHC GASOLINE MAP	1、Fault Code 2、Data Stream	
		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream	
	02. PRIDE 2002	01. ENGINE CONTROL	01. 1. 3L SOHC GASOLINE MAP	1、Fault Code 2、Data Stream	
		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream	
	03. PRIDE 1999	01. ENGINE CONTROL	01. 1. 3L SOHC GASOLINE MAP	1、Fault Code 2、Data Stream	
	04. PRIDE 1998	01. ENGINE CONTROL	01. 1. 3L SOHC GASOLINE MAP	1、Fault Code 2、Data Stream	
	05. PRIDE BEFORE 1998	01. ENGINE CONTROL	01. 1. 3L SOHC GASOLINE MAP	1、Fault Code 2、Data Stream	
	02. AVELLA	01. ALL MODEL YEAR	01. ENGINE CONTROL	01. 1. 3L SOHC GASOLINE MAP	1、Fault Code 2、Data Stream
			01. ENGINE CONTROL	01. 1. 1L VGT DIESEL KWP	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
				02. 1. 0L/1. 1L SOHC EOB	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
03. 1. 0L/1. 1L SOHC GEN				1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion	
01. PICANTO-MORNING 2006		01. ENGINE CONTROL	04. 1. 0L/1. 1L SOHC LEAD	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion	
			02. AUTOMATIC TRANSAXLE	1、Fault Code 2、Data Stream 3、Data Stream	
			03. ELEC. POWER STEERING	1、Fault Code 2、Data Stream 3、ECUversion	
			04. IMMOBILIZER	01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
		02. GASOLIN		1、Fault Code 2、Data Stream 3、Data Stream	
		03. PICANTO-MORNING	02. PICANTO-MORNING 2004-2005	01. ENGINE CONTROL	01. 1. 0L/1. 1L SOHC EOB
02. 1. 0L/1. 1L SOHC GEN	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion				
03. 1. 0L/1. 1L SOHC LEAD	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion				
02. AUTOMATIC TRANSAXLE	1、Fault Code 2、Data Stream 3、Data Stream				
03. IMMOBILIZER	1、Fault Code 2、Data Stream 3、Data Stream				

04. VISTO	01. ALL MODEL YEAR	01. ENGINE L4-SOHC	01. UNLEAD ALL	1、Fault Code 2、Data Stream 3、Data Stream
			02. UNLEAD IMMO	1、Fault Code 2、Data Stream 3、Data Stream
			03. LEAD ALL	1、Fault Code 2、Data Stream 3、Data Stream
		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream 3、Data Stream
		03. ANTI-LOCK BRAKE SYSTEM		1、Fault Code 2、Data Stream 3、Data Stream
		04. SRS-AIRBAG		1、Fault Code 2、Data Stream
	01. RIO 2004-2005	01. ENGINE CONTROL	01. 1. 3/1. 5L GASOLINE MAP	1、Fault Code 2、Data Stream
			02. 1. 3/1. 5L MAF	1、Fault Code 2、Data Stream
			03. 1. 3/1. 5L GASOLINE W/IMMO	1、Fault Code 2、Data Stream
			04. 1. 3/1. 5L GASOLINE LEAD	1、Fault Code 2、Data Stream
	02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream	
	03. ANTI-LOCK BRAKE SYSTEM	01. DLC CABLE 16	1、Fault Code 2、Data Stream 3、Data Stream	
		02. 20PIN RED KIA CONNECTOR	1、Fault Code 2、Data Stream 3、Data Stream	
	04. SRS-AIRBAG		1、Fault Code	
02. RIO 2003	01. ENGINE CONTROL	01. 1. 3/1. 5L GASOLINE MAP	1、Fault Code 2、Data Stream	
		02. 1. 3/1. 5L MAF	1、Fault Code 2、Data Stream	
		03. 1. 3/1. 5L GASOLINE W/IMMO	1、Fault Code 2、Data Stream	
		04. 1. 3/1. 5L GASOLINE LEAD	1、Fault Code 2、Data Stream	
	02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream	
	03. ANTI-LOCK BRAKE SYSTEM	01. DLC CABLE 16	1、Fault Code 2、Data Stream 3、Data Stream	
		02. 20PIN RED KIA CONNECTOR		
	04. SRS-AIRBAG		1、Fault Code	
05. RIO	03. RIO2001-2002	01. ENGINE CONTROL	01. 1. 3/1. 5L GASOLINE MAP	1、Fault Code 2、Data Stream
			02. 1. 3/1. 5L MAF	1、Fault Code 2、Data Stream
			03. 1. 3/1. 5L (RHD) MAP	1、Fault Code 2、Data Stream
			04. 1. 3/1. 5L (RHD) MAF	1、Fault Code 2、Data Stream
			05. 1. 3/1. 5L GASOLINE W/IMMO	1、Fault Code 2、Data Stream
			06. 1. 3/1. 5L GASOLINE LEAD	1、Fault Code 2、Data Stream
		02. AUTOMATIC TRANSAXLE	01. TCU LHD	1、Fault Code 2、Data Stream
			02. TCU RHD	1、Fault Code 2、Data Stream
		03. ANTI-LOCK BRAKE SYSTEM	01. ABS LHD	1、Fault Code 2、Data Stream 3、Data Stream
			02. ABS RHD	1、Fault Code 2、Data Stream 3、Data Stream
		04. SRS-AIRBAG	01. A/BAG LHD	1、Fault Code

OR
06. SEPHIA-MENT

04. RIO 2000	01. ENGINE CONTROL	02. A/BAG RHD	1. Fault Code	
		01. 1. 3/1. 5L GASOLINE MAP	1. Fault Code 2. Data Stream	
		02. 1. 3/1. 5L MAF	1. Fault Code 2. Data Stream	
		03. 1. 3/1. 5L (RHD) MAP	1. Fault Code 2. Data Stream	
		04. 1. 3/1. 5L (RHD) MAF	1. Fault Code 2. Data Stream	
		05. 1. 3/1. 5L GASOLINE W/IMMO	1. Fault Code 2. Data Stream	
		06. 1. 3/1. 5L GASOLINE LEAD	1. Fault Code 2. Data Stream	
		02. AUTOMATIC TRANSAXLE	01. TCU LHD	1. Fault Code 2. Data Stream
		02. TCU RHD	1. Fault Code 2. Data Stream	
		03. ANTI-LOCK BRAKE SYSTEM	01. ABS LHD	1. Fault Code 2. Data Stream 3. Data Stream
		02. ABS RHD	1. Fault Code 2. Data Stream 3. Data Stream	
		04. SRS-AIRBAG	01. A/BAG LHD	1. Fault Code
		02. A/BAG RHD	1. Fault Code	
		01. ENGINE CONTROL	01. 1. 6L DOHC NON IMMO	1. Fault Code 2. Data Stream
01. SEPHIA-MENTOR 2004	02. AUTOMATIC TRANSAXLE	02. 1. 6L DOHC W/IMMO	1. Fault Code 2. Data Stream	
		03. 1. 6L DOHC LEAD	1. Fault Code 2. Data Stream	
		04. 1. 8L DOHC GASOLINE TED	1. Fault Code 2. Data Stream	
		03. ANTI-LOCK BREAK SYSTEM	1. Fault Code 2. Data Stream 3. Data Stream	
02. SEPHIA-MENTOR 2003	04. SRS-AIRBAG	01. 1. 6L DOHC NON IMMO	1. Fault Code	
		02. 1. 6L DOHC W/IMMO	1. Fault Code 2. Data Stream	
		03. 1. 6L DOHC LEAD	1. Fault Code 2. Data Stream	
		04. 1. 8L DOHC GASOLINE TED	1. Fault Code 2. Data Stream	
		02. AUTOMATIC TRANSAXLE	1. Fault Code 2. Data Stream	
		03. ANTI-LOCK BREAK SYSTEM	1. Fault Code 2. Data Stream 3. Data Stream	
		04. SRS-AIRBAG	1. Fault Code	
		01. ENGINE CONTROL	01. 1. 6L DOHC NON IMMO	1. Fault Code 2. Data Stream
03. SEPHIA-MENTOR 2002	02. AUTOMATIC TRANSAXLE	02. 1. 6L DOHC W/IMMO	1. Fault Code 2. Data Stream	
		03. 1. 6L DOHC LEAD	1. Fault Code 2. Data Stream	
		04. 1. 8L DOHC GASOLINE TED	1. Fault Code 2. Data Stream	
		03. ANTI-LOCK BREAK SYSTEM	1. Fault Code 2. Data Stream 3. Data Stream	
		04. SRS-AIRBAG	1. Fault Code	
		01. ENGINE CONTROL	01. 1. 6L DOHC NON IMMO	1. Fault Code 2. Data Stream
		02. 1. 6L DOHC W/IMMO	1. Fault Code 2. Data Stream	
		03. 1. 6L DOHC LEAD	1. Fault Code 2. Data Stream	
04. SEPHIA-MENTOR 2001	04. 1. 8L DOHC GASOLINE TED	04. 1. 8L DOHC GASOLINE TED	1. Fault Code 2. Data Stream	
		02. AUTOMATIC TRANSAXLE	1. Fault Code 2. Data Stream	
		03. ANTI-LOCK BREAK SYSTEM	1. Fault Code 2. Data Stream 3. Data Stream	
		04. SRS-AIRBAG	1. Fault Code	

		02. AUTOMATIC TRANSAXLE		1, Fault Code 2, Data Stream
		03. ANTI-LOCK BREAK SYSTEM		1, Fault Code 2, Data Stream 3, Data Stream
		04. SRS-AIRBAG		1, Fault Code
05.	01. ENGINE CONTROL	01. 1. 5L GASOLINE BFD/BFES		1, Fault Code 2, Data Stream
SHUMA-SPECTRA		02. 1. 8L DOHC GASOLINE TED		1, Fault Code 2, Data Stream
2000	02. AUTOMATIC TRANSAXLE			1, Fault Code 2, Data Stream
	03. ANTI-LOCK BREAK SYSTEM			1, Fault Code 2, Data Stream 3, Data Stream
	04. SRS-AIRBAG			1, Fault Code
06.	01. ENGINE CONTROL	01. 1. 5L GASOLINE BFD/BFES		1, Fault Code 2, Data Stream
SHUMA-SPECTRA		02. 1. 8L DOHC GASOLINE TED		1, Fault Code 2, Data Stream
1999	02. AUTOMATIC TRANSAXLE			1, Fault Code 2, Data Stream
	03. ANTI-LOCK BREAK SYSTEM			1, Fault Code 2, Data Stream 3, Data Stream
	04. SRS-AIRBAG			1, Fault Code
01. CERATO 2006	01. ENGINE CONTROL	01. 1. 6L DIESEL VGT EURO-4		1, Fault Code 2, Data Stream 3, Data Stream 4, ECUversion
		02. 2. 0L DIESEL ALL		1, Fault Code 2, Data Stream 3, Data Stream 4, ECUversion
		03. 1. 5L DIESEL ALL		1, Fault Code 2, Data Stream 3, Data Stream 4, ECUversion
		04. 1. 6L DOHC EOBD		1, Fault Code 2, Data Stream 3, Data Stream 4, ECUversion
		05. 1. 6L DOHC GEN		1, Fault Code 2, Data Stream 3, Data Stream 4, ECUversion
		06. 1. 6L DOHC LEAD		1, Fault Code 2, Data Stream 3, Data Stream 4, ECUversion
		07. 2. 0L DOHC(+CVVT) EOBD		1, Fault Code 2, Data Stream 3, Data Stream
		08. 2. 0L DOHC(-CVVT) EOBD		1, Fault Code 2, Data Stream 3, Data Stream
		09. 2. 0L DOHC(+CVVT) GEN		1, Fault Code 2, Data Stream 3, Data Stream
		10. 2. 0L DOHC(-CVVT) GEN		1, Fault Code 2, Data Stream 3, Data Stream
		11. 2. 0L DOHC(+CVVT) LEAD		1, Fault Code 2, Data Stream 3, Data Stream
		12. 2. 0L DOHC(-CVVT) LEAD		1, Fault Code 2, Data Stream 3, Data Stream
	02. AUTOMATIC TRANSAXLE	01. 1. 6L DOHC ALL		1, Fault Code 2, Data Stream 3, Data Stream

08. CERATO

		01. 2. 0L DOHC ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream 4、 ECUversion
	03. ANTI-LOCK BREAK SYSTEM		1 、 Fault Code 2 、 Data Stream 3、 Data Stream
	04. IMMOBILIZER	01. 1. 6L DIESEL(VGT) EURO-4	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		02. 2. 0L/1. 5L DIESEL ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		03. 1. 6L DOHC ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		04. 2. 0L DOHC ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
02. CERATO 2005	01. ENGINE CONTROL	01. 2. 0L DIESEL ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream 4、 ECUversion
		02. 1. 5L DIESEL ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream 4、 ECUversion
		03. 1. 6L DOHC EOBD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream 4、 ECUversion
		04. 1. 6L DOHC GEN	1 、 Fault Code 2 、 Data Stream 3、 Data Stream 4、 ECUversion
		05. 1. 6L DOHC LEAD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream 4、 ECUversion
		06. 2. 0L DOHC(+CVVT) EOBD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		07. 2. 0L DOHC(-CVVT) EOBD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		08. 2. 0L DOHC(+CVVT) GEN	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		09. 2. 0L DOHC(-CVVT) GEN	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		10. 2. 0L DOHC(+CVVT) LEAD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		11. 2. 0L DOHC(-CVVT) LEAD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
	02. AUTOMATIC TRANSAXLE	01. 1. 6L DOHC ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		01. 2. 0L DOHC ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream 4、 ECUversion
	03. ANTI-LOCK BREAK SYSTEM		1 、 Fault Code 2 、 Data Stream 3、 Data Stream
	04. IMMOBILIZER	01. 2. 0L/1. 5L DIESEL ALL	1 、 Fault Code 2 、 Data

09. CARENS	03. CERATO 2004	01. ENGINE CONTROL	02. 1. 6L DOHC ALL	Stream 3、Data Stream 1、Fault Code 2、Data Stream 3、Data Stream
			03. 2. 0L DOHC ALL	1、Fault Code 2、Data Stream 3、Data Stream
			01. 2. 0L DIESEL ALL	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
			02. 1. 6L DOHC EOB	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
			03. 1. 6L DOHC GEN	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
			04. 1. 6L DOHC LEAD	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
			05. 2. 0L DOHC(+CVVT) EOB	1、Fault Code 2、Data Stream 3、Data Stream
			06. 2. 0L DOHC(-CVVT) EOB	1、Fault Code 2、Data Stream 3、Data Stream
			07. 2. 0L DOHC(+CVVT) GEN	1、Fault Code 2、Data Stream 3、Data Stream
			08. 2. 0L DOHC(-CVVT) GEN	1、Fault Code 2、Data Stream 3、Data Stream
	01. CARENS 2006	02. AUTOMATIC TRANSAXLE	01. 1. 6L DOHC ALL	1、Fault Code 2、Data Stream 3、Data Stream
			01. 2. 0L DOHC ALL	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
			03. ANTI-LOCK BREAK SYSTEM	1、Fault Code 2、Data Stream 3、Data Stream
				04. IMMOBILIZER
		01. ENGINE CONTROL	01. ENG-2. 0L CVVT ALL	1、Fault Code 2、Data Stream 3、Data Stream
			02. 2. 0L DIESEL(KWP) EURO-4	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
			03. 2. 0L DIESEL EURO-3	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
			04. 1. 6L DOHC EOB(W/IMMO)	1、Fault Code 2、Data Stream
			05. 1. 6L DOHC EOB(NON IMMO)	1、Fault Code 2、Data Stream

		06. 1. 8L DOHC NON IMMO	1、Fault Code 2、Data Stream
		07. 1. 8L DOHC W/IMMO	1、Fault Code 2、Data Stream
		08. 1. 8L DOHC EURO-IV	1、Fault Code 2、Data Stream
		09. 1. 8L DOHC LEAD	1、Fault Code 2、Data Stream
	02. AUTOMATIC TRANSAXLE	01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion
		02. GASOLINE	1、Fault Code 2、Data Stream
	03. ANTI-LOCK BREAK SYSTEM	01. 16PIN OBD2 CONNECTOR	1、Fault Code 2、Data Stream 3、Data Stream
		02. 20PIN RED KIA CONNECTOR	1、Fault Code 2、Data Stream 3、Data Stream
	04. IMMOBILIZER	01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
		02. GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
02. CARENS 2005	01. ENGINE CONTROL	01. ENG-2.0L CVVT ALL	1、Fault Code 2、Data Stream 3、Data Stream
		02. 2.0L DIESEL ALL	1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion
		03. 1. 6L DOHC EOBD(W/IMMO)	1、Fault Code 2、Data Stream
		04. 1. 6L DOHC EOBD(NON IMMO)	1、Fault Code 2、Data Stream
		05. 1. 8L DOHC NON IMMO	1、Fault Code 2、Data Stream
		06. 1. 8L DOHC W/IMMO	1、Fault Code 2、Data Stream
		07. 1. 8L DOHC EURO-IV	1、Fault Code 2、Data Stream
		08. 1. 8L DOHC LEAD	1、Fault Code 2、Data Stream
	02. AUTOMATIC TRANSAXLE	01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion
		02. GASOLINE	1、Fault Code 2、Data Stream
	03. ANTI-LOCK BREAK SYSTEM	01. 16PIN OBD2 CONNECTOR	1、Fault Code 2、Data Stream 3、Data Stream
		02. 20PIN RED KIA CONNECTOR	1、Fault Code 2、Data Stream 3、Data Stream
	04. SRS-AIRBAG		1、Fault Code 2、Data Stream
	05. IMMOBILIZER	01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
		02. GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
03. CARENS 2004	01. ENGINE CONTROL	01. 2.0L DIESEL ALL	1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion
		02. 1. 6L DOHC EOBD(W/IMMO)	1、Fault Code 2、Data Stream
		03. 1. 6L DOHC EOBD(NON IMMO)	1、Fault Code 2、Data Stream
		04. 1. 8L DOHC NON IMMO	1、Fault Code 2、Data Stream
		05. 1. 8L DOHC W/IMMO	1、Fault Code 2、Data Stream

			06. 1. 8L DOHC EURO-IV	1、Fault Code 2、Data Stream
			07. 1. 8L DOHC LEAD	1、Fault Code 2、Data Stream
	02. AUTOMATIC TRANSAXLE		01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion
			02. GASOLINE	1、Fault Code 2、Data Stream
	03. ANTI-LOCK BREAK SYSTEM		01. 16PIN OBD2 CONNECTOR	1、Fault Code 2、Data Stream 3、Data Stream
			02. 20PIN RED KIA CONNECTOR	1、Fault Code 2、Data Stream 3、Data Stream
	04. SRS-AIRBAG			1、Fault Code 2、Data Stream
	05. IMMOBILIZER		01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
			02. GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
04. CARENS 2003	01. ENGINE CONTROL		01. 2. 0L DIESEL ALL	1、Fault Code 2、Data Stream 3、Data Stream
			02. 1. 8L DOHC NON IMMO	1、Fault Code 2、Data Stream
			03. 1. 8L DOHC W/IMMO	1、Fault Code 2、Data Stream
			04. 1. 8L DOHC EURO-IV	1、Fault Code 2、Data Stream
			05. 1. 8L DOHC LEAD	1、Fault Code 2、Data Stream
	02. AUTOMATIC TRANSAXLE		01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion
			02. GASOLINE	1、Fault Code 2、Data Stream
	03. ANTI-LOCK BREAK SYSTEM		01. 16PIN OBD2 CONNECTOR	1、Fault Code 2、Data Stream 3、Data Stream
			02. 20PIN RED KIA CONNECTOR	1、Fault Code 2、Data Stream 3、Data Stream
	04. SRS-AIRBAG			1、Fault Code 2、Data Stream
	05. IMMOBILIZER		01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
			02. GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
05. CARENS 2002	01. ENGINE CONTROL		01. 1. 8L DOHC M/T	1、Fault Code 2、Data Stream
			02. 1. 8L DOHC	1、Fault Code 2、Data Stream
	02. AUTOMATIC TRANSAXLE			1、Fault Code 2、Data Stream
	03. ANTI-LOCK BREAK SYSTEM			1、Fault Code 2、Data Stream 3、Data Stream
	04. SRS-AIRBAG			1、Fault Code
	05. IMMOBILIZER		01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
			02. GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
06. CARENS 2001	01. ENGINE CONTROL		01. 1. 8L DOHC M/T	1、Fault Code 2、Data Stream
			02. 1. 8L DOHC	1、Fault Code 2、Data Stream
	02. AUTOMATIC TRANSAXLE			1、Fault Code 2、Data Stream

10. SPORTAGE	07. CARENS 2000	03. ANTI-LOCK BREAK SYSTEM		1、Fault Code 2、Data Stream 3、Data Stream
		04. SRS-AIRBAG		1、Fault Code
		05. IMMOBILIZER	01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
			02. GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
			01. 1.8L DOHC GASOLINE TED	1、Fault Code 2、Data Stream
	08. CARENS 1999	02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream
		03. ANTI-LOCK BREAK SYSTEM		1、Fault Code 2、Data Stream 3、Data Stream
		04. SRS-AIRBAG		1、Fault Code
		05. IMMOBILIZER	01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
			02. GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
	01. SPORTAGE 2006	01. ENGINE CONTROL	01. 1.8L DOHC GASOLINE	1、Fault Code 2、Data Stream
		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream
		03. ANTI-LOCK BREAK SYSTEM		1、Fault Code 2、Data Stream 3、Data Stream
		04. SRS-AIRBAG		1、Fault Code
		05. IMMOBILIZER	01. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
			02. GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
		01. 2.0L DIESEL (KWP) EURO-4	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion	
		02. 2.0L DIESEL EURO-3	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion	
		03. 2.0L CVVT EOBD	1、Fault Code 2、Data Stream 3、Data Stream	
		04. 2.0L CVVT GEN	1、Fault Code 2、Data Stream 3、Data Stream	
		05. 2.0L CVVT LEAD	1、Fault Code 2、Data Stream 3、Data Stream	
	06. 2.7L V6 EOBD	1、Fault Code 2、Data Stream 3、Data Stream		
	07. 2.7L V6 GEN	1、Fault Code 2、Data Stream 3、Data Stream		
	08. 2.7L V6 LEAD	1、Fault Code 2、Data Stream 3、Data Stream		
	02. AUTOMATIC TRANSAXLE	01. 2.0L DIESEL/2.7L GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion	
	03. ELEC. POWER STEERING		1、Fault Code 2、ECUversion	
	04. IMMOBILIZER	01. DIESEL ALL	1、Fault Code 2、Data	

02. SPORTAGE 2005	01. ENGINE CONTROL	02. 2.0L CVVT ALL	Stream 3、Data Stream 1、Fault Code 2、Data Stream 3、Data Stream	
		01. 2.0L DIESEL EURO-3	1、Fault Code 2、Data Stream 3、Data Stream4、 ECUversion	
		02. 2.0L CVVT EOB	1、Fault Code 2、Data Stream 3、Data Stream	
		03. 2.0L CVVT GEN	1、Fault Code 2、Data Stream 3、Data Stream	
		04. 2.0L CVVT LEAD	1、Fault Code 2、Data Stream 3、Data Stream	
		05. 2.7L V6 EOB	1、Fault Code 2、Data Stream 3、Data Stream	
		06. 2.7L V6 GEN	1、Fault Code 2、Data Stream 3、Data Stream	
	02. AUTOMATIC TRANSAXLE	07. 2.7L V6 LEAD	1、Fault Code 2、Data Stream 3、Data Stream	
		01. 2.0L DIESEL/2.7L GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream4、 ECUversion	
		03. IMMOBILIZER	01. DIESEL ALL 1、Fault Code 2、Data Stream 3、Data Stream	
03. SPORTAGE 2003	04. ELEC. POWER STEERING	02. 2.0L CVVT ALL	1、Fault Code 2、Data Stream 3、Data Stream	
		01. ENGINE CONTROL	1、Fault Code 2、Data Stream 1、Fault Code 2、Data Stream 3、Data Stream	
	02. AUTOMATIC TRANSAXLE	01. 2.0L DOHC (HFM) BOSCH	1、Fault Code 2、Data Stream	
		02. 2.0L DOHC (HFM) LEAD	1、Fault Code 2、Data Stream 3、Data Stream	
	03. ANTI-LOCK BREAK SYSTEM	01. TCU GASOLINE	1、Fault Code 2、Data Stream	
		02. YCU DIESEL	1、Fault Code 2、Data Stream	
	04. SPORTAGE 2002	03. ANTI-LOCK BREAK SYSTEM	01. ABS GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
			02. ABS DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
		01. ENGINE CONTROL	01. 2.0L DOHC (HFM) BOSCH	1、Fault Code 2、Data Stream
			02. 2.0L DOHC (HFM) LEAD	1、Fault Code 2、Data Stream 3、Data Stream
02. AUTOMATIC TRANSAXLE		01. TCU GASOLINE	1、Fault Code 2、Data Stream	
		02. YCU DIESEL	1、Fault Code 2、Data Stream	
05. SPORTAGE 2001	03. ANTI-LOCK BREAK SYSTEM	01. ABS GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream	
		02. ABS DIESEL	1、Fault Code 2、Data Stream 3、Data Stream	
	01. ENGINE CONTROL	01. 2.0L DOHC (HFM) BOSCH	1、Fault Code 2、Data Stream	
		02. 2.0L DOHC (HFM) LEAD	1、Fault Code 2、Data Stream 3、Data Stream	

		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream
		03. ANTI-LOCK BREAK SYSTEM	01. ABS GASOLINE	1、Fault Code 2、Data Stream
			02. ABS DIESEL	1、Fault Code 2、Data Stream
	06. SPORTAGE 2000	01. ENGINE CONTROL	01. 2.0L DOHC(HFM) UNLEAD	1、Fault Code 2、Data Stream
			02. UNLEAD(AUS)	1、Fault Code 2、Data Stream
			03. 2.0L DOHC(HFM) LEAD	1、Fault Code 2、Data Stream
		02. AUTOMATIC TRANSAXLE	01. TCU GASOLINE	1、Fault Code 2、Data Stream
			02. YCU DIESEL	1、Fault Code 2、Data Stream
	07. SPORTAGE 1999	01. ENGINE CONTROL	01. GASOLINE/DIESEL	1、Fault Code 2、Data Stream
			02. UNLEAD(AUS)	1、Fault Code 2、Data Stream
		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream
	08. SPORTAGE 1998	01. ENGINE CONTROL	01. GASOLINE/DIESEL	1、Fault Code 2、Data Stream
			02. UNLEAD(AUS)	1、Fault Code 2、Data Stream
		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream
	09. SPORTAGE BEFORE 1998	01. ENGINE CONTROL		1、Fault Code 2、Data Stream
	01. CLARUS 2000	01. ENGINE CONTROL	01. 1.8L GASOLINE	1、Fault Code 2、Data Stream
			02. 2.0L GASOLINE	1、Fault Code 2、Data Stream
		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream
		03. ANTI-LOCK BREAK SYSTEM		1、Fault Code 2、Data Stream
		04. SRS-AIRBAG		1、Fault Code
	02. CLARUS 1999	01. ENGINE CONTROL	01. 1.8L GASOLINE	1、Fault Code 2、Data Stream
			02. 2.0L GASOLINE	1、Fault Code 2、Data Stream
		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream
		03. ANTI-LOCK BREAK SYSTEM		1、Fault Code 2、Data Stream
		04. SRS-AIRBAG		1、Fault Code
	03. CLARUS 1998	01. ENGINE CONTROL	01. 1.8L GASOLINE	1、Fault Code 2、Data Stream
			02. 2.0L GASOLINE	1、Fault Code 2、Data Stream
		02. AUTOMATIC TRANSAXLE		1、Fault Code 2、Data Stream
		03. ANTI-LOCK BREAK SYSTEM		1、Fault Code 2、Data Stream
		04. SRS-AIRBAG		1、Fault Code
	04. CLARUS BEFORE 1998	01. ENGINE CONTROL	01. 1.8L GASOLINE	1、Fault Code 2、Data Stream
			02. 2.0L GASOLINE	1、Fault Code 2、Data Stream

11. CLARUS

03. OPTIMA/MAGENTIS 2003	01. ENGINE CONTROL	03. TCU FOR 2.0L GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream	
		03. ANTI-LOCK BREAK SYSTEM	1、Fault Code 2、Data Stream 3、Data Stream	
		04. SRS-AIRBAG	1、Fault Code 2、Data Stream	
		01. 2.7L V6 GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream	
		02. 2.5L V6 EURO-III	1、Fault Code 2、Data Stream 3、Data Stream	
		03. 2.5L V6 GENERAL	1、Fault Code 2、Data Stream 3、Data Stream	
		04. 2.5L V6 LEAD	1、Fault Code 2、Data Stream 3、Data Stream	
		05. 2.4L DOHC MELCO	1、Fault Code 2、Data Stream 3、Data Stream	
		06. 2.4L DOHC A/T MELCO	1、Fault Code 2、Data Stream 3、Data Stream	
		07. 2.0L DOHC A/T LEAD	1、Fault Code 2、Data Stream 3、Data Stream	
		08. 2.0L DOHC M/T MELCO	1、Fault Code 2、Data Stream 3、Data Stream	
		09. 2.0L DOHC M/T MELCO	1、Fault Code 2、Data Stream 3、Data Stream	
		02. AUTOMATIC TRANSAXLE	01. TCU FOR 2.5L/2.7L GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
			02. TCU FOR 2.4L GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
			03. TCU FOR 2.0L GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream
04. OPTIMA/MAGENTIS 2002	01. ENGINE CONTROL	03. ANTI-LOCK BREAK SYSTEM	1、Fault Code 2、Data Stream 3、Data Stream	
		04. SRS-AIRBAG	1、Fault Code 2、Data Stream	
		01. 2.7L V6 GASOLINE	1、Fault Code 2、Data Stream 3、Data Stream	
		02. 2.5L V6 EURO-III	1、Fault Code 2、Data Stream 3、Data Stream	
		03. 2.5L V6 GENERAL	1、Fault Code 2、Data Stream 3、Data Stream	
		04. 2.5L V6 LEAD	1、Fault Code 2、Data Stream 3、Data Stream	
		05. 2.4L DOHC MELCO	1、Fault Code 2、Data Stream 3、Data Stream	
		06. 2.4L DOHC A/T MELCO	1、Fault Code 2、Data Stream 3、Data Stream	
		07. 2.0L DOHC A/T LEAD	1、Fault Code 2、Data Stream 3、Data Stream	
		08. 2.0L DOHC M/T MELCO	1、Fault Code 2、Data Stream 3、Data Stream	

			09. 2. 0L DOHC M/T MELCO	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		02. AUTOMATIC TRANSAXLE	01. TCU FOR 2. 5L/2. 7L GASOLINE	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			02. TCU FOR 2. 4L GASOLINE	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			03. TCU FOR 2. 0L GASOLINE	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		03. ANTI-LOCK BREAK SYSTEM		1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		04. SRS-AIRBAG		1、 Fault Code 2、 Data Stream
	05. OPTIMA/MAGENTIS 2000-2001	01. ENGINE CONTROL	01. 2. 5L V6 EURO-III	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			02. 2. 5L V6 GENERAL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			03. 2. 5L V6 LEAD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			04. 2. 4L DOHC MELCO	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			05. 2. 4L DOHC A/T MELCO	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			06. 2. 0L DOHC A/T LEAD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			07. 2. 0L DOHC M/T MELCO	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			08. 2. 0L DOHC M/T MELCO	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		02. AUTOMATIC TRANSAXLE	01. TCU FOR 2. 5L/2. 7L GASOLINE	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			02. TCU FOR 2. 4L GASOLINE	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			03. TCU FOR 2. 0L GASOLINE	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		03. ANTI-LOCK BREAK SYSTEM		1 、 Fault Code 2 、 Data Stream 3、 Data Stream
		04. SRS-AIRBAG		1、 Fault Code 2、 Data Stream
13. POTENTIA	01. ALL MODE YEAR	01. ENGINE CONTROL	01. 2. 0L DOHC(HFM) UNLEAD	1、 Fault Code 2、 Data Stream
14. ENTERRISE	01. ALL MODE YEAR	01. ENGINE CONTROL	01. 2. 5L GASOLINE JED	1、 Fault Code 2、 Data Stream
			02. 3. 0L GASOLINE JED	1、 Fault Code 2、 Data Stream
			03. OBD II 98-99 MY	1、 Fault Code 2、 Data Stream
	01. CARNIVAL-SEDONA 2006	01. ENGINE CONTROL	01. 2. 7/3. 8L GASOLINE EOBD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
15. CARNIVAL-SE DONA			02. 2. 7/3. 8L GASOLINE GEN	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			03. 2. 7-3. 8L GASOLINE LEAD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
			04. J2. 9L WGT(DIESEL)	1 、 Fault Code 2 、 Data

02. CARNIVAL-SEDONA 2005	02. AUTOMATIC TRANSAXLE	C-RALL	Stream 3、Data Stream	
		01. TCU 2.7-3.0L(GASOLINE)	1、Fault Code 2、Data Stream 3、Data Stream	
		02. TCU 2.9 WGT(DIESEL)	1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion	
		03. IMMOBLIZER	01. 3.8L GASOLINE 1、Fault Code 2、Data Stream 3、Data Stream 02. DIESEL 1、Fault Code 2、Data Stream 3、Data Stream	
	01. ENGINE CONTROL	01. 3.5L GASOLINE CHINA	1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion	
		02. 3.5L GASOLINE M/EAST	1、Fault Code 2、Data Stream 3、Data Stream	
		03. 2.5L V6 EURO-III	1、Fault Code 2、Data Stream	
		04. 2.5L GASOLINE KV6	1、Fault Code 2、Data Stream 3、Data Stream	
		05. 2.9L DIESEL C/RAIL	1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion	
		06. 3.0L DIESEL J3TC1	1、Fault Code 2、Data Stream	
02. AUTOMATIC TRANSAXLE	01. 3.5L GASOLINE M/EAST	1、Fault Code 2、Data Stream 3、Data Stream		
	02. GASOLINE	1、Fault Code 2、Data Stream 3、ECUversion		
	03. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream		
03. ANTI-LOCK BREAK SYSTEM	01. ABS	1、Fault Code 2、Data Stream 3、Data Stream		
	02. ABS EURO-III	1、Fault Code 2、Data Stream 3、Data Stream		
	03. ABS C/RAIL	1、Fault Code 2、Data Stream 3、Data Stream		
03. CARNIVAL-SEDONA 2004	04. SRS-AORBAG		1、Fault Code	
		01. ENGINE CONTROL	01. 3.5L GASOLINE M/EAST	1、Fault Code 2、Data Stream 3、Data Stream
			02. 2.5L V6 EURO-III	1、Fault Code 2、Data Stream
			03. 2.5L GASOLINE KV6	1、Fault Code 2、Data Stream 3、Data Stream
	04. 2.9L DIESEL C/RAIL		1、Fault Code 2、Data Stream 3、Data Stream4、ECUversion	
		05. 3.0L DIESEL J3TC1	1、Fault Code 2、Data Stream	
		02. AUTOMATIC TRANSAXLE	01. 3.5L GASOLINE M/EAST	1、Fault Code 2、Data Stream 3、Data Stream
	02. GASOLINE		1、Fault Code 2、Data Stream3、ECUversion	

			03. DIESEL	1、Fault Code 2、Data Stream 3、Data Stream
		03. ANTI-LOCK BREAK SYSTEM	01. ABS	1、Fault Code 2、Data Stream 3、Data Stream
			02. ABS EURO-III	1、Fault Code 2、Data Stream 3、Data Stream
			03. ABS C/RAIL	1、Fault Code 2、Data Stream 3、Data Stream
		04. SRS-AORBAG		1、Fault Code
04.	01. ENGINE CONTROL	01. 3.5L GASOLINE M/EAST		1、Fault Code 2、Data Stream 3、Data Stream
CARNIVAL-SEDONA		02. 2.5L V6 EURO-III		1、Fault Code 2、Data Stream
2003		03. 2.5L GASOLINE KV6		1、Fault Code 2、Data Stream 3、Data Stream
		04. 2.9L DIESEL C/RAIL		1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion
		05. 3.0L DIESEL J3TC1		1、Fault Code 2、Data Stream
	02. AUTOMATIC TRANSAXLE	01. 3.5L GASOLINE M/EAST		1、Fault Code 2、Data Stream 3、Data Stream
		02. GASOLINE		1、Fault Code 2、Data Stream 3、Data Stream
		03. DIESEL		1、Fault Code 2、Data Stream
	03. ANTI-LOCK BREAK SYSTEM	01. ABS		1、Fault Code 2、Data Stream 3、Data Stream
		02. ABS EURO-III		1、Fault Code 2、Data Stream 3、Data Stream
		03. ABS C/RAIL		1、Fault Code 2、Data Stream 3、Data Stream
	04. SRS-AORBAG			1、Fault Code 2、Data Stream
05.	01. ENGINE CONTROL	01. 2.5L GASOLINE (EUROPE) KV6		1、Fault Code 2、Data Stream 3、Data Stream
CARNIVAL-SEDONA		02. 2.4/2.5L GASOLINE (GEN) KV6		1、Fault Code 2、Data Stream 3、Data Stream
2002		03. 2.9L DIESEL C/RAIL		1、Fault Code 2、Data Stream 3、Data Stream
	02. AUTOMATIC TRANSAXLE	01. GASOLINE		1、Fault Code 2、Data Stream 3、Data Stream
		02. DIESEL		1、Fault Code 2、Data Stream
	03. ANTI-LOCK BREAK SYSTEM	01. ABS		1、Fault Code 2、Data Stream 3、Data Stream
		02. ABS EURO-III		1、Fault Code 2、Data Stream 3、Data Stream
		03. ABS C/RAIL		1、Fault Code 2、Data Stream 3、Data Stream
	04. SRS-AORBAG			1、Fault Code 2、Data Stream
06.	01. ENGINE CONTROL	01. 2.5L GASOLINE (EUROPE) KV6		1、Fault Code 2、Data Stream 3、Data Stream

	CARNIVAL-SEDONA 2000-2001	02. 2. 5L GASOLINE (GENERAL) KV6	01. TCU (GENERAL) GAS	1. Fault Code 2, Data Stream 3, Data Stream
		02. AUTOMATIC TRANSAXLE	02. TCU (EUROPE) GAS	1. Fault Code 2, Data Stream 3, Data Stream
			03. TCU (GENERAL) DIESEL	1. Fault Code 2, Data Stream 3, Data Stream
			04. TCU (EUROPE) DIESEL	1. Fault Code 2, Data Stream 3, Data Stream
		03. ANTI-LOCK BREAK SYSTEM	01. ABS (EUROPE)	1. Fault Code 2, Data Stream 3, Data Stream
			02. ABS (GENERAL) GAS	1. Fault Code 2, Data Stream 3, Data Stream
			03. ABS (GENERAL) DIESEL	1. Fault Code 2, Data Stream 3, Data Stream
		04. SRS-AORBAG	01. A/BAG (EUROPE)	1. Fault Code 2, Data Stream 3, Data Stream
			02. A/BAG (GENERAL)	1. Fault Code 2, Data Stream 3, Data Stream
	07. CARNIVAL-SEDONA 1998-1999	01. ENGINE CONTROL	01. 2. 5L GASOLINE (EUROPE) KV6	1. Fault Code 2, Data Stream 3, Data Stream
			02. 2. 5L GASOLINE (GENERAL) KV6	1. Fault Code 2, Data Stream 3, Data Stream
		02. AUTOMATIC TRANSAXLE	01. TCU (GENERAL) GAS	1. Fault Code 2, Data Stream 3, Data Stream
			02. TCU (EUROPE) GAS	1. Fault Code 2, Data Stream 3, Data Stream
			03. TCU (GENERAL) DIESEL	1. Fault Code 2, Data Stream 3, Data Stream
			04. TCU (EUROPE) DIESEL	1. Fault Code 2, Data Stream 3, Data Stream
		03. ANTI-LOCK BREAK SYSTEM	01. ABS (EUROPE)	1. Fault Code 2, Data Stream 3, Data Stream
			02. ABS (GENERAL) GAS	1. Fault Code 2, Data Stream 3, Data Stream
			03. ABS (GENERAL) DIESEL	1. Fault Code 2, Data Stream 3, Data Stream
		04. SRS-AORBAG	01. A/BAG (EUROPE)	1. Fault Code 2, Data Stream 3, Data Stream
			02. A/BAG (GENERAL)	1. Fault Code 2, Data Stream 3, Data Stream
16. RETONA	01. ALL MODE YEAR	01. ENGINE CONTROL	01. 2. 0L GASOLINE	1. Fault Code 2, Data Stream 3, Data Stream
	01. ALL MODE YEAR	01. ENGINE CONTROL	01. 2. 0L GASOLINE EURO-III	1. Fault Code 2, Data Stream 3, Data Stream
		02. ANTI-LOCK BREAK SYSTEM		1. Fault Code 2, Data Stream 3, Data Stream
17. JOICE		03. SRS-AORBAG		1. Fault Code 2, Data Stream 3, ECUversion
	01. PREGIO-BESTA	01. ENGINE CONTROL	01. 2. 5L DIESEL (4D56 TC1)	1. Fault Code 2, Data Stream 3, Data Stream
18. PREGIO-BEST	2006			
	02. PREGIO-BESTA	01. ENGINE CONTROL	01. 2. 5L DIESEL (4D56 TC1)	1. Fault Code 2, Data Stream 3, Data Stream
	2004-2005			

19. KZ500	03. PREGIO-BESTA 2003	01. ENGINE CONTROL	01. 2. 5L DIESEL(4D56 TC1)	1 、 Fault Code 2 、 Data Stream 3、 Data Stream		
	04. PREGIO-BESTA 2002	01. ENGINE CONTROL	01. 2. 5L DIESEL(4D56 TC1)	1 、 Fault Code 2 、 Data Stream 3、 Data Stream		
	01. KZ500 2006	01. ENGINE CONTROL	01. 2. 5L DIESEL(4D56 TC1)	1 、 Fault Code 2 、 Data Stream 3、 Data Stream		
	02. KZ500 2004-2005	01. ENGINE CONTROL	01. 2. 5L DIESEL(4D56 TC1)	1 、 Fault Code 2 、 Data Stream 3、 Data Stream		
	03. KZ500 2003	01. ENGINE CONTROL	01. 2. 5L DIESEL(4D56 TC1)	1 、 Fault Code 2 、 Data Stream 3、 Data Stream		
	04. KZ500 2002	01. ENGINE CONTROL	01. 2. 5L DIESEL(4D56 TC1)	1 、 Fault Code 2 、 Data Stream 3、 Data Stream		
	20. SORENTO	01. SORENTO 2007	01. ENGINE CONTROL	01. 3. 8L GASOLINE(LAMBDA) EOB	1 、 Fault Code 2 、 Data Stream 3、 Data Stream	
				02. 3. 8L GASOLINE(LAMBDA) GEN	1 、 Fault Code 2 、 Data Stream 3、 Data Stream	
				03. 3. 8L GASOLINE(LAMBDA) ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream	
				04. 2. 5L VGT DIESEL KWP	1 、 Fault Code 2 、 Data Stream 3、 Data Stream4 、 ECUversion	
		02. AUTOMATIC TRANSAXLE		01. 3. 0L GASOLINE BOSCH	1 、 Fault Code 2 、 Data Stream3、 ECUversion	
				03. ELEC. POWER STEERING	1、 Fault Code 2、 ECUversion	
				04. IMMOBLIZER	01. DIESEL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
					02. GASOLINE	1 、 Fault Code 2 、 Data Stream 3、 Data Stream
02. SORENTO 2004-2006		01. ENGINE CONTROL	01. ENGINE DIESEL (A-ENG)	02. 3. 5L V6 GASOLINE ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream	
				03. 2. 4L GASOLINE UNLEAD	1 、 Fault Code 2 、 Data Stream 3、 Data Stream	
	04. 2. 4L GASOLINE LEAD			1 、 Fault Code 2 、 Data Stream 3、 Data Stream		
	02. AUTOMATIC TRANSAXLE			1 、 Fault Code 2 、 Data Stream 3、 Data Stream		
	03. ELEC. POWER STEERING		04. IMMOBLIZER		1、 Fault Code	
					1 、 Fault Code 2 、 Data Stream 3、 Data Stream	
03. SORENTO 2003	01. ENGINE CONTROL	01. ENGINE DIESEL (A-ENG)	1 、 Fault Code 2 、 Data Stream 3、 Data Stream			
		02. 3. 5L V6 GASOLINE ALL	1 、 Fault Code 2 、 Data Stream 3、 Data Stream			

21. OPIRUS-AMANTI
TI

<p>OPIRUS-AMANTI 2004-2005</p>	<p>02. AUTOMATIC TRANSAXLE 03. SRS-AIRBAG 04. ELEC. POWER STEERING 05. IMMOBLIZER 01. ENGINE CONTROL 02. AUTOMATIC TRANSAXLE 03. ANTI-LOCK BREAK SYSTEM 04 SRS-AIRBAG</p>	<p>03. 2. 4L GASOLINE UNLEAD 04. 2. 4L GASOLINE LEAD 01. 3. 5L V6 EOBD 02. 3. 5L V6 GEN</p>	<p>1、Fault Code 2、Data Stream 3、Data Stream 1、Fault Code 2、Data Stream 3、Data Stream 1、Fault Code 2、Data Stream 3、Data Stream 1、Fault Code 1、Fault Code 1、Fault Code 2、Data Stream 3、Data Stream 1、Fault Code 2、Data Stream 3、Data Stream 1、Fault Code 2、Data Stream 3、Data Stream 1、Fault Code 2、Data Stream 3、Data Stream 4、ECUversion 1、Fault Code 2、Data Stream 3、Data Stream 1、Fault Code 2、Data Stream</p>
------------------------------------	--	---	--