

VW CAN-BUS system (including COMMON testing only for non –CAN system)

Year	system	01 ECU Version	02 Scan DTC Memory	03 Actuator diagnosis	04 Basic setting	05 Erase DTC memory	06 Stop output	07 Codin g of ECU	08 Read data block	09 Data stream	10 Adaption	Login	38 Read VIN	11 Cod ing 2	16 Access autorizat on
Up to 2009/03 Vehicle	01-Engine Electronics	√	√	√	√	√	√	√	√	√	√	√	√	√	√
	02-Gearbox Electronics	√	√	√	√	√	√	√	√	√	√	√		√	√
	03-Brake Electronics	√	√	√	√	√	√	√	√	√	√	√		√	√
	08-A/C/Heater Electronics	√	√	√	√	√	√	√	√	√	√	√		√	√
	09-Electronic central electric	√	√	√	√	√	√	√	√	√	√	√		√	√
	15-Air bag	√	√	√	√	√	√	√	√	√	√	√		√	√
	16-Steering wheel electronic	√	√	√	√	√	√	√	√	√	√	√		√	√
	17-Dash panel insert	√	√	√	√	√	√	√	√	√	√	√		√	√
	18-Additional/auxiliary heating	√	√	√	√	√	√	√	√	√	√	√		√	√
	19-Diagnosis Interf.f.Data Bus	√	√	√	√	√	√	√	√	√	√	√		√	√
	22-Four wheel drive electronics	√	√	√	√	√	√	√	√	√	√	√		√	√
	25-Immobilizer	√	√	√	√	√	√	√	√	√	√	√		√	√
35-Central locking	√	√	√	√	√	√	√	√	√	√	√		√	√	
37-Navigation	√	√	√	√	√	√	√	√	√	√	√		√	√	

